


HOW TO USE YOUR REMOTE CONTROL

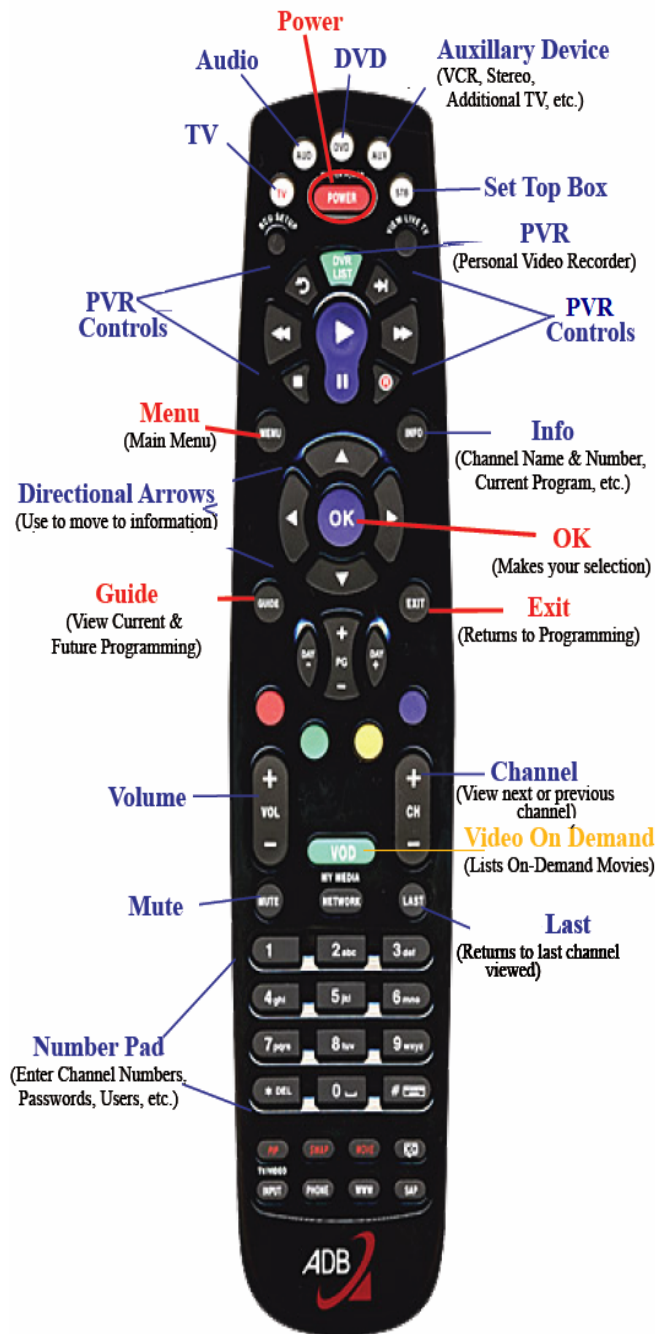

1120 15th Avenue
Bloomer, WI 54724
(715) 568-4830

www.bloomer.net



To Purchase a Movie on Pay-Per-View

[You must buy the movie before or within 10 minutes of the start time]

1. Enter channel **701 – 707**
2. Press **Guide**
3. Use **Arrow** keys to view movies/events for the day
4. Highlight the movie/event you would like to buy and press **OK**
5. Scroll to **Buy PPV** and press **OK**
6. The purchase price will be displayed. To accept the charges enter your **Pin #** (if **Pin** is enabled in **Settings**) and select **Buy**
7. Your movie will then begin on schedule

The Vault Menu

1. Press **Menu** button
2. Scroll to highlight **Vault**
3. Press **OK**
4. Information is located here for Videos, PPV Events, Pay Per Blocks, Sports Packages, Reminders, Messages, and Caller ID.
5. Scroll to category; highlight and press **OK** to view the stored information.

Settings - Access requires a password. Bloomer Telephone Company will assign a default password that you may change as you wish.

Hardware Settings – These settings will be handled by your Bloomer Telephone Company technician upon installation. They will be selected based on your TV.

Turn On Your TV Using the Remote Control

1. Press the center button labeled **Power**

Finding a Channel/Program or Changing Channels

1. Enter the desired channel number
OR
2. Press **Guide** to view complete list of channels
Scroll through the channel line up using the **up/down arrow keys** or the **CH** button (scrolls by page)
Select desired channel by pressing **OK** twice

Menu Button

Guide – Takes you to the channel lists

PVR - ****Available with DVR Service****, this will take you to a list of your recordings and scheduled events.

Vault - Stores information such as your Caller ID, PPV Events, and Recordings

Settings – Requires a password

Parental Controls – If applicable to your service.

Favorites – Set up your “Personalized Guide”

Search – Search the Guide

Programming Guide

Your Programming Guide has multiple **tabbed** channel lists [based on your package]: Examples:

All, HD, Subscribed, Favorites

Press **Guide repeatedly** to scroll through the Guide tabs

DVR Function Buttons:

****Available with DVR Service****

The **Pause/Resume** live TV button is located under the **Green DVR List** button on the remote control.

Other function buttons located in this area are

Rewind, Fast Forward, Stop, and Record

Channel Action

Press Guide

1. **Highlight the Program you wish to take an action with:** Press **OK**

2. A Secondary Menu will read:

Record Program – Record a program to your *DVR*

You may select **OK** again to edit your recording.

Record Series - Record a program series to your *DVR*. You may select **OK** again to edit your recording.

Set Reminder - Set a reminder of an upcoming show.

Set Autotune – Choose to have your TV automatically tune to a show

Add to Favorites – Select and choose a list of favorites if you have more than one.

More Info - Displays more detail about the program

Cancel – Cancels last action

Setting Up Favorites – A Personalized Guide

1. While viewing a program, press **OK** and scroll to **Add to Favorites**.

2. Use arrow keys to scroll to select a Favorites list to add to and press **OK**

OR

1. Press **Menu** button

2. Use arrow keys to scroll to **Favorites**. You will be able to choose a list, edit a list, create a list, or delete a list

3. Select **Create [if this is your first list]**,

4. Highlight “Name”, which is automatically populated by “Favorites + a number”

5. Press **OK** to bring up the key pad, and select **Del** to clear the current name

6. Use arrow keys to select letters/numbers until the name appears as desired and select **DONE**

7. The channel lineup will now display

8. To select a channel to be viewed on your guide: highlight channel, press **OK**, and a heart will appear next to that channel

9. To remove a channel from your guide: highlight channel, press **OK**, and the heart will disappear

10. After all desired channels have been selected, use the arrow keys to scroll over to **Update** and press **OK**

11. Press **Guide** until desired Favorites tab name displays

Parental Controls (Setting Up/Editing)

1. Press **Menu** button

2. Use arrow keys to scroll to **Settings** and press **OK**

3. **Enter your password** and select **OK**

4. Use arrow keys to scroll through options and make changes

5. Select **Submit** to apply the changes made

Setting a Reminder

1. Press **Guide** button

2. Use arrow keys to scroll through channels to find program of choice and press **OK**

3. Use arrow keys to scroll down to **Set Reminders** and press **OK**

4. When a reminder is set, a picture of a clock will appear on the channel that was chosen

Setting Autotune

1. Press **Guide** button

2. Use arrow keys to scroll through channels to find the program of choice and press **OK**

Pin/Password Options

The **Users** screen will prompt you to add or edit your Password/ PIN

The Pin # is what allows PPV purchases if enabled.

1. Press **Menu** button

2. Use arrow keys to scroll to **Settings**

3. **Enter Password to gain access.**

4. Scroll to **User** tab and press **OK**.

5. Select **Edit** and add or edit the Password/Pin

6. Check the “**Enable PIN**” box

7. Select **Submit**